
# INSTALLATION STRUCTURE - LPC 3/4/5 (TRIAC)




Fixture Size: Ø3.75"\*H6" / Ø4.5"\*H6" / Ø5.5"\*H6.38"

Mounting: Surface Mounting

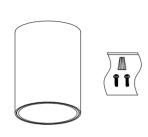


1. Unpack and take out the fixture.

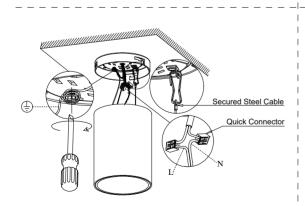


4. Making all the wire connections as the drawing shown.




2. Remove the top cover by clockwise rotation.

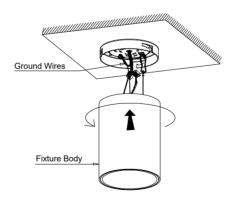

5. Mounting the fixture body to the top cover by counterclockwise rotation until no more force can be exerted.

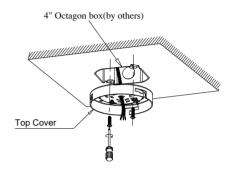

3. Mounting the top cover onto the J-box.

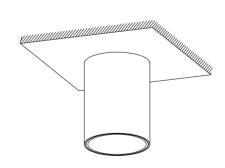

6. Finish the installing.

# INSTALLATION STRUCTURE - LPC 3/4/5 (DMV)




Fixture Size: Ø3.75"\*H6" / Ø4.5"\*H6" / Ø5.5"\*H6.38"


Mounting: Surface Mounting




1. Unpack and take out the fixture.

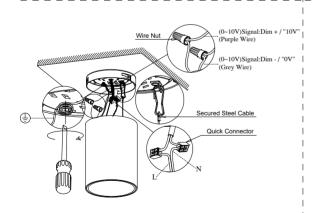


4. Making all the wire connections as the drawing shown.

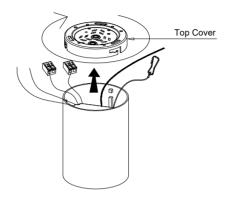


2. Remove the top cover by clockwise rotation.

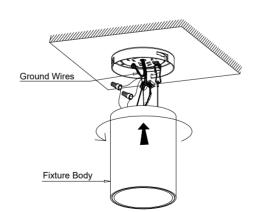

Mounting the fixture body to the top cover by counterclockwise rotation until no more force can be exerted.

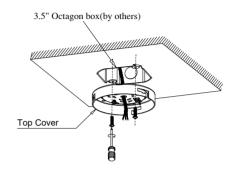

3. Mounting the top cover onto the J-box.

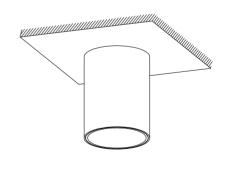


6. Finish the installing.

# INSTALLATION STRUCTURE - LPC 3/4/5 (TRIAC)




Fixture Size: Ø3.75"\*H6" / Ø4.5"\*H6" / Ø5.5"\*H6.38"


Mounting: Cable Mounting

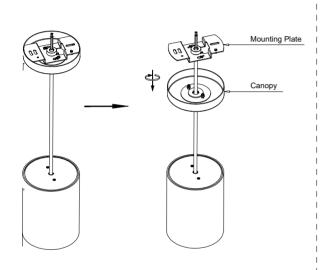

1. Unpack and take out the fixture / accessory bag. Then twist down the canopy from the mounting plate.

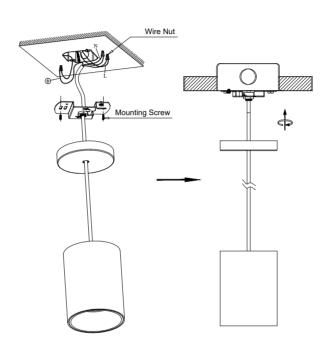

2. Install the mounting plate of the fixture to J-box with mounting screws, then twist up the canopy to the mounting plate.




3. Finish the installation, turn on the power.

# INSTALLATION STRUCTURE - LPC 3/4/5 (DMV)




Fixture Size: Ø3.75"\*H6" / Ø4.5"\*H6" / Ø5.5"\*H6.38"


Mounting: Cable Mounting

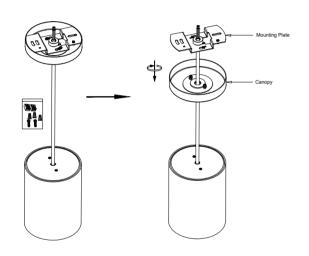

1. Unpack and take out the fixture / accessory bag. Then twist down the canopy from the mounting plate.

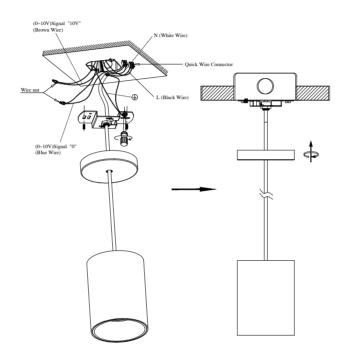

2. Connect the wires in turn as the shown and neatly place all wires and wire nut connections inside the J-box, then install the mounting plate to J-box with mounting screws, finally twist up the canopy to the mounting plate.




3. Finish the installation, turn on the power.

#### INSTALLATION STRUCTURE - LPC 3/4/5 (TRIAC)




Fixture Size: Ø3.75"\*H6" / Ø4.5"\*H6" / Ø5.5"\*H6.38"


Mounting: Pendant Mounting

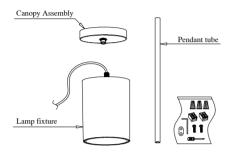


1. Unpack the package and take out the fixture / accessories.

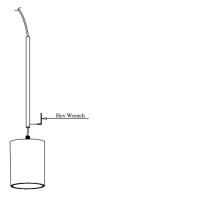

Thread the wire through the pendant tube, then screw the pendant tube into the lamp fixture and secure it from the side with a headless screw.

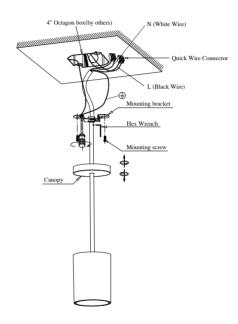

3. Twist down the mounting bracket from the canopy assembly, then install the mounting bracket to J-box with mounting screws, put the canopy into the pendant tube, then thread the power wire through the mounting bracket, next screw the pendant tube into the mounting bracket and secure it from the side with a headless screw, and use a screwdriver to lock the power wire on the mounting bracket from the side. then Connect the wires in turn as the shown and neatly place all wires and wire nut connections inside the J-box, twist up the canopy on the mounting bracket.

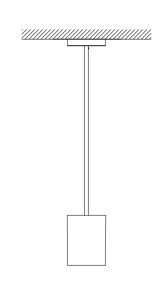


4. After finish the installation, turn on the power.

### INSTALLATION STRUCTURE - LPC 3/4/5 (DMV)




Fixture Size: Ø3.75"\*H6" / Ø4.5"\*H6" / Ø5.5"\*H6.38"


Mounting: Pendant Mounting

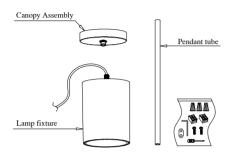


1. Unpack the package and take out the fixture / accessories.

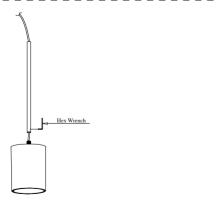

Thread the wire through the pendant tube, then screw the pendant tube into the lamp fixture and secure it from the side with a headless screw.

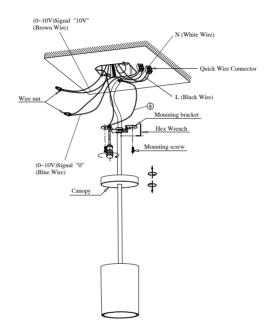

3. Twist down the mounting bracket from the canopy assembly, then install the mounting bracket to J-box with mounting screws, put the canopy into the pendant tube, then thread the power wire through the mounting bracket, next screw the pendant tube into the mounting bracket and secure it from the side with a headless screw, and use a screwdriver to lock the power wire on the mounting bracket from the side. then Connect the wires in turn as the shown and neatly place all wires and wire nut connections inside the J-box, twist up the canopy on the mounting bracket.

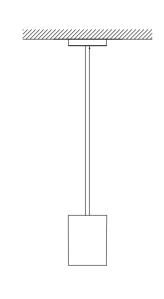

4. After finish the installation, turn on the power.